Functional · FRS Series White 5000K

lumher

USER MANUAL

24 V DC

155 lm/W

NOT CASCADABLE

75 mm

INCREMENTAL

FUNCTIONAL

TACTILE

PIR

SWITCH

POWER 1x
ECO 0,5x

IP40

PWM

DIMABLE

CABLE

M12A

CLASS III

36 MONTHS

EU

MADE IN SPAIN

1. Product Description

LED luminaire suitable for installation in electrical panels, machinery, home, elevators, machine vision, etc.

Structure made of silver anodized aluminum with multiple options. Equipped with the latest generation LEDs, the internal electronics allow direct connection to a power source, thus extending the life of the luminaire. In vision luminaires, a protection system is included to avoid exceeding the recommended triggering time.

2. Safety Tips

LUMHER luminaires have been manufactured according to the technical specifications specified for each model, using high-quality components and following a delicate production process.
Each production detail has been carefully crafted, from the manufacture of the electronic circuit to the final packaging, maintaining all quality criteria.
Users should consider the following safety tips regarding the product.

- This manual should be kept close to the luminaire.
- It is important that users read all instructions before connecting the luminaire.
- Follow the instructions in this document.
- Install the product taking into account the safety risks specified in this document.
- LUMHER is not responsible for improper use of this luminaire.

2.1. Correct Use of the Luminaire

The product classification is IP40 or IP65 depending on the selected model, so this information must be considered when using the luminaire.

2.2. Product Safety

If the luminaire is not used correctly, it may be harmful to individuals due to electrical risks.

- The connection should ONLY be made by qualified personnel.
- Disconnect the power before performing any manipulation of the luminaire.
- The luminaire must comply with all the requirements indicated on the product label.
- Maintenance and repair should be carried out only by qualified personnel.
- There may be a risk of explosion if the luminaire is used in explosive environments.
- Do not install the luminaire in explosive environments.

Installation and Safety

- Avoid hitting the luminaire, even with packaging. It is a fragile product. Strong impacts may damage the luminaire.
- Use only the fastenings provided by the manufacturer.
- Properly use the mounting fixings.
- The luminaire must be securely fastened with the appropriate screws depending on the installation surface.
- Periodically check that the luminaire is properly installed.

Glare Hazard

- Avoid looking directly at the luminaire, as it may cause temporary vision problems, irritation, and eye pain.
- Do not look directly at the light source.
- Adjust the luminaire so that the light source does not directly impact the operator's eyes.

Hazard from Non-Original Spare Parts

- Always use original spare parts from the manufacturer.

Damage Due to High Temperatures

Install the luminaire in environments where there is no high temperature. A temperature above the maximum operating range can drastically reduce the luminaire's lifespan. Avoid direct sunlight.

Damage Due to Repairs

Do not disassemble or repair the equipment if not done by qualified personnel. Improper repairs may cause damage to people and objects.
In case of failure, do not repair; return to technical support.
Any modification of the product not performed by the technical service will void the warranty.

2.2. Risk Levels

DANGER: Risk in case of non-compliance. It may cause immediate injury or even death.
WARNING: Risk in case of non-compliance. It may cause injuries or even death.
ATTENTION: Risk in case of non-compliance. It may cause immediate injuries.
ADVICE: Risk in case of non-compliance. It may cause damage to objects.

3. Versions

The product code can be found on the luminaire label and packaging. Find the luminaire code on the packaging label and verify the item with the product label.
The barcode on the label shows the week and year of manufacture.
Do not remove the product label, as it will facilitate traceability in case of return due to failure or malfunction.
If the luminaire does not have a label, it will lose its warranty.

lumher

4. Technical specifications

Power supply voltage	24 Vdc ±5%	
Luminous efficiency	155 lm/W	
Motion sensor disconnection delay (PIR)	5 min.	
Wavelength	Daylight white	5000K
Beam angle	Semidiffuse Ultradiffuse	60° 110°
Max. number of cascadable modules	This luminaire is not cascadable	
Electrical protections	Transient overvoltages Polarity reversal Current sabilizer	YES YES YES
Colour Rendering Index (CRI)	≥ 80	
IP Rating	IP40	
Protection type	Class III	
Operating temperature	POWER version ECO version	-10°C to +40°C -10°C to +50°C
Storage temperature	0°C a +60°C	
Max. relative humidity	80% (without condensation)	
Body material	Anodized aluminum	
Side cover material	Anodized aluminum	
Diffuser material	Polycarbonate	
Connection types	M12A, 2m cable, M12A connector with cable	
Standards	RoHs, CE	

5. Connection

Input M12A - Cable	Power	Eco	Dual
Pin 1 - Brown	+24 Vdc	+24 Vdc	+24 Vdc
Pin 2 - White	Not connected	Not connected	24 Vdc = Power 0 Vdc = Eco
Pin 3 - Blue	0 Vdc	0 Vdc	0 Vdc
Pin 4 - Black (1)	24 Vdc = Power on 0 Vdc = Switched on by motion sensor or touch sensor		

(1) Pin 4 is not connected in the switch version

M12A Male

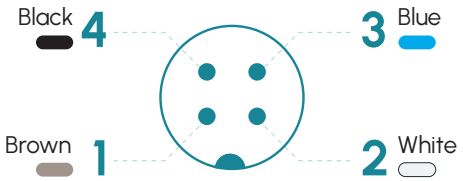

Fixings

F01G1, F00R1, M6D16

FRS · 5000K

lumher

6. Measures

Tactile sensor + M12A axial input

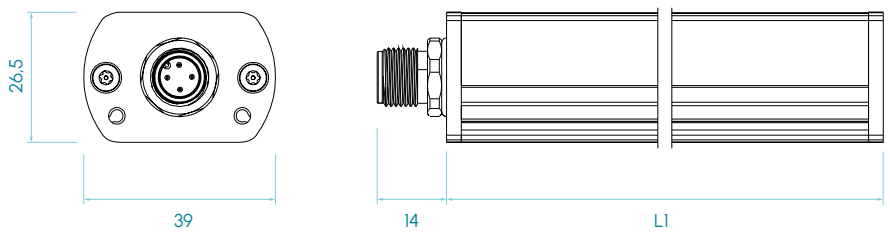

Motion sensor + M12A axial input

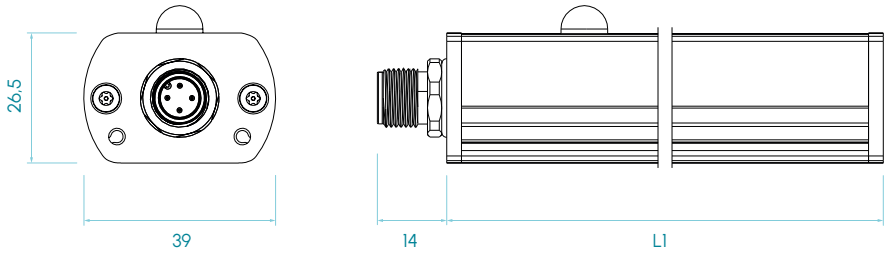

Switch + M12A radial input

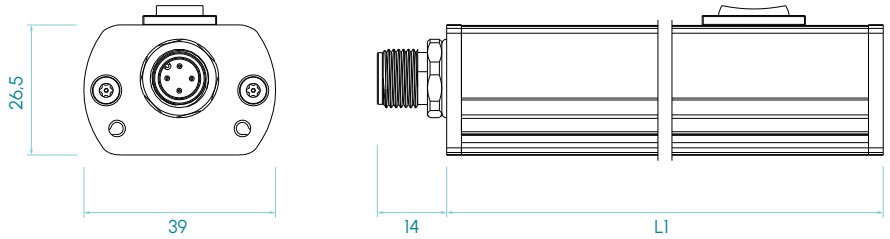

Measures in mm

7. Selection guide

FRS D 3

Input
- K - Axial cable, 2 m
- Y - M12A axial male connector
- PY - 10 cm axial cable with M12A male connector

Diffuser
- C - Semidiffuse
- U - Ultradiffuse

Working mode
- A - Power + movement sensor
- B - Eco + movement sensor
- C - Dual + movement sensor
- F - Power + touch sensor
- G - Eco + touch sensor
- H - Dual + touch sensor
- J - Power + switch
- K - Eco + switch
- M - Dual + switch

Length
- 1 - 18 - 75 mm steps

FRS · 5000K

lumher

FRS Series · Daylight White 5000K

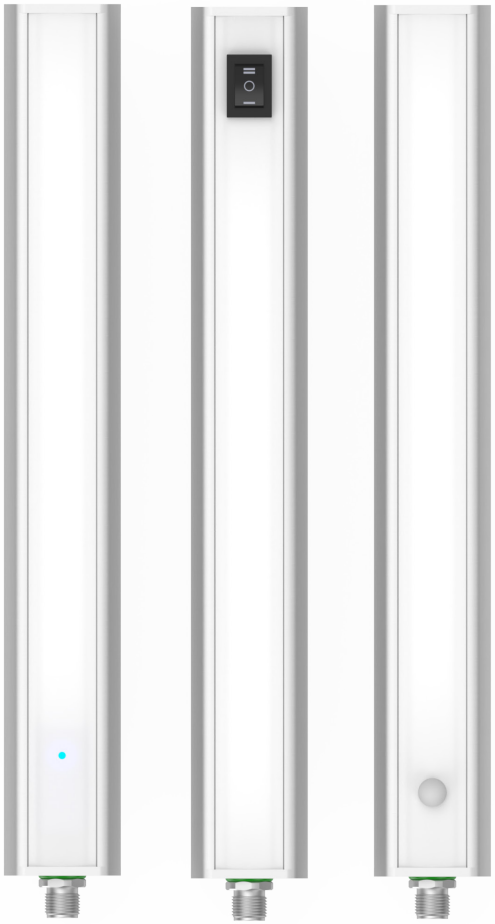

5000K
DAYLIGHT WHITE

SEMIDIFFUSE 60°

ULTRADIFFUSE 110°

PHOTOBIOLOGICAL RISK
RG1 - LOW

60.000h
LIFESPAN

Table of characteristics

	Length L1 (mm)	Weight (g)	Illuminance Ev (lx) @ 1 m				Luminous flux (2) (lm)		Power consumed (W)	
			SEMIDIFFUSE		ULTRADIFFUSE					
			POWER	ECO	POWER	ECO	POWER	ECO	POWER	ECO
FRS 01...	140	240	88	50	53	30	372	186	2,4	1,2
FRS 02...	215	280	176	100	105	60	744	372	4,8	2,4
FRS 03...	290	320	264	150	158	89	1.116	558	7,2	3,6
FRS 04...	365	360	352	200	210	119	1.488	744	9,6	4,8
FRS 05...	440	400	440	250	263	149	1.860	930	12,0	6,0
FRS 06...	515	440	528	300	315	179	2.232	1.116	14,4	7,2
FRS 07...	590	480	616	350	368	209	2.604	1.302	16,8	8,4
FRS 08...	665	520	705	400	421	238	2.976	1.488	19,2	9,6
FRS 09...	740	560	793	450	473	268	3.348	1.674	21,6	10,8
FRS 10...	815	600	881	500	526	298	3.720	1.860	24,0	12,0
FRS 11...	890	640	969	550	578	328	4.092	2.046	26,4	13,2
FRS 12...	965	680	1.057	600	631	358	4.464	2.232	28,8	14,4
FRS 13...	1.040	720	1.145	650	684	387	4.836	2.418	31,2	15,6
FRS 14...	1.115	760	1.233	699	736	417	5.208	2.604	33,6	16,8
FRS 15...	1.190	800	1.321	749	789	447	5.580	2.790	36,0	18,0
FRS 16...	1.265	840	1.409	799	841	477	5.952	2.976	38,4	19,2
FRS 17...	1.340	880	1.497	849	894	507	6.324	3.162	40,8	20,4
FRS 18...	1.415	920	1.585	899	946	536	6.696	3.348	43,2	21,6

(2) The luminous flux (lm) is before the diffuser

lumher

8. Control

For Strobe mode operation, it is recommended that the power supply be twice as powerful as the Strobe mode lamp.
Maintain input voltage within the permissible range; incorrect voltage will damage the LED driver. **Permitted voltage range: 24VDC±5%**
Improper wiring can cause lamp breakage, material, and personal damage. Electrical connection must be carried out by qualified personnel. Strictly follow the indications shown in the connection section to ensure correct polarity.

9. Switching On and Off

The luminaire does not have automatic on/off functionality. This function is only available in vision models and versions with a presence sensor.
The luminaire turns on when receiving voltage and turns off when the voltage is removed.
The luminaire allows PWM dimming (except for machine vision models).

10. Troubleshooting

If the lamp does not turn on:

- Check that the lamp is correctly connected to the power source.
- Verify that the polarity of the connection pins is correct.

If the lamp is defective, contact:
CONTAVAL S.L.U. (Lumher Technical Support)
Telf. +34 963 843 700
Email: service@lumher.es

11. Replacing the Light Source

The light source is adhered to the profile using thermal adhesive glue.
Thanks to the long lifespan of the LED, around 60,000 hours*, light source replacement will not be necessary if used as indicated in this manual.
In case the light source needs to be replaced, contact the technical department.

** Value for white LED*

12. Product Maintenance and Cleaning

WARNING - **Disconnect power before performing any maintenance tasks.**
This product does not require special maintenance.

- Cleaning tasks should only be carried out after turning off the lamp and once the surfaces have cooled down.
- Then proceed to clean the lamp with a non-abrasive liquid and a soft cloth.
- Regularly check that the four mounting screws are properly tightened.

ADVICE - **Liquid leaks can damage the lamp.**

13. Repair and Warranty

During the product's lifespan, the warranty covers product analysis and repair exclusively by Lumher's technical department or an authorized distributor, including the following points:

- Custody of the material provided for repair
- Cost of components, including labor dedicated to the defective product

The warranty does not cover:

- Transportation, packaging, and shipping costs
- Deterioration or damage caused by:
  - Installation and/or operation different from what is described in this manual
  - Repairs or repair attempts by personnel not authorized by Lumher
  - Operation of the equipment in environmental conditions other than those specified in the luminaire's technical sheet
  - Damage caused by liquid leaks in the lamp
  - Damage during transportation due to not following proper indications or inadequate packaging (original packaging is recommended)

WARRANTY PERIOD: The warranty period is 36 months from the date of purchase. Once this period has expired, repair services will be provided at the cost of replacement parts and labor according to established rates.

lumher

14. Recycling

Disposal of Obsolete Electrical and Electronic Devices (Directive 2002/96/EC-WEEE):
The crossed-out trash bin symbol indicates that this product, as it contains electrical and electronic components, should not be mixed with untreated municipal waste. For more detailed information regarding the recycling of this product, check your country's waste disposal regulations. Do not dispose of this product as solid waste, even if it contains such components. Reuse or proper recycling of electrical or electronic equipment (EEE) is important to protect the environment and human health.
According to the European WEEE Directive 2002/96/EC, these types of products should be disposed of in electrical and electronic waste disposal areas. The equipment may be disposed of by the distributor when purchasing an equivalent. Public administrations and manufacturers of electrical and electronic equipment are involved in facilitating all processes for the reuse and recovery of discarded electrical and electronic equipment through collection campaigns using appropriate planning mechanisms.
Incorrect disposal of electrical or electronic waste may be punishable by law according to the sanctions established by each country.

15. Symbology

	CE Logo
	CLASS III DEVICE Device that works with extra-low voltages.
IP40 / IP65	IP Rating
	LED Technology
	Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on the disposal of Waste Electrical and Electronic Equipment (WEEE) (OJ L 37, 13.2.2003, p. 1).

lumher